




Encore Parts Manual

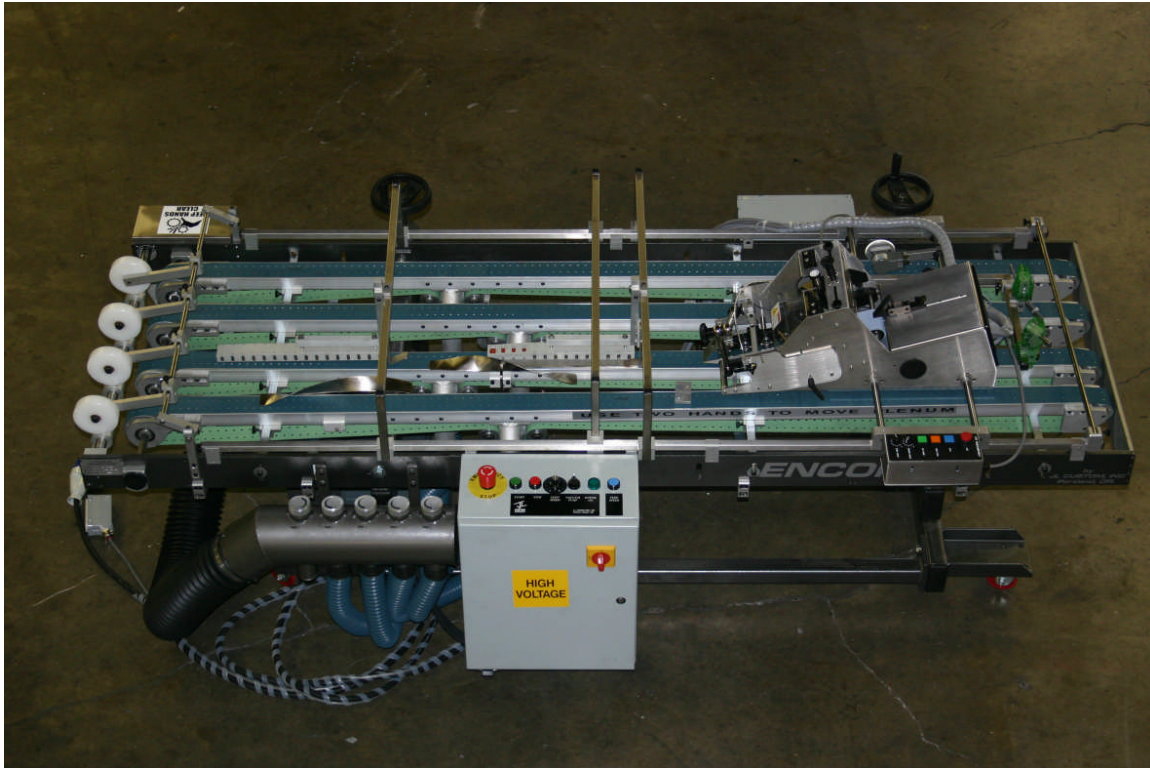

Encore lower frame

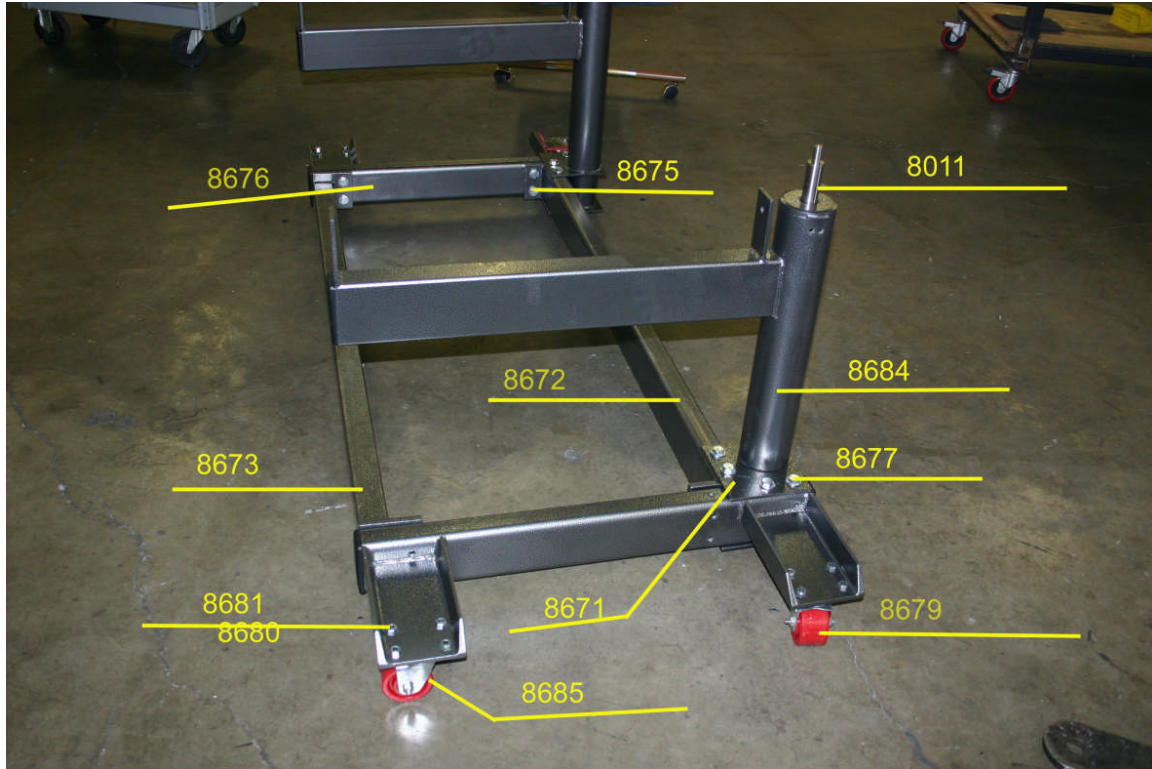


Encore upper frame

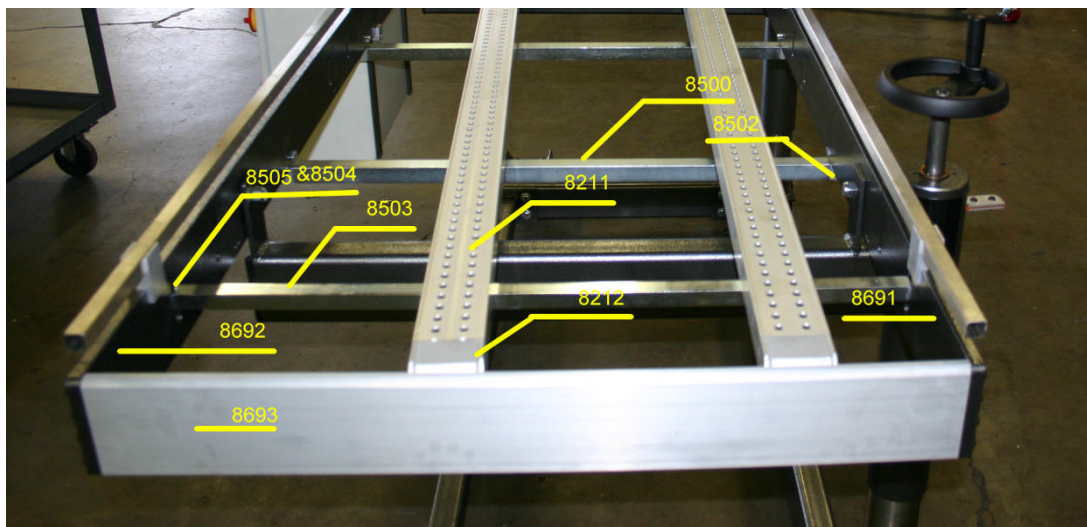


part#8211& #8212 must be ordered as assembly#8210 Note

Encore inner tower and lift assy.

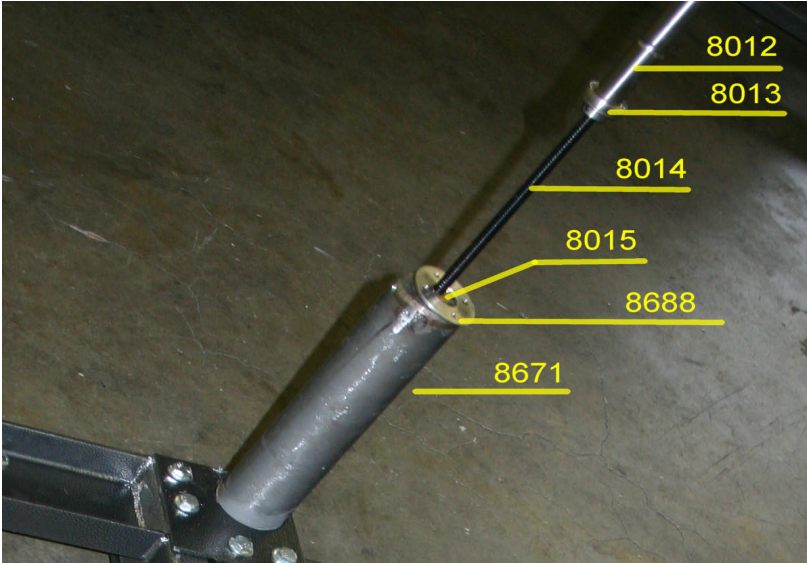


Note: part numbers 8012-8015


sold as a complete assembly only.

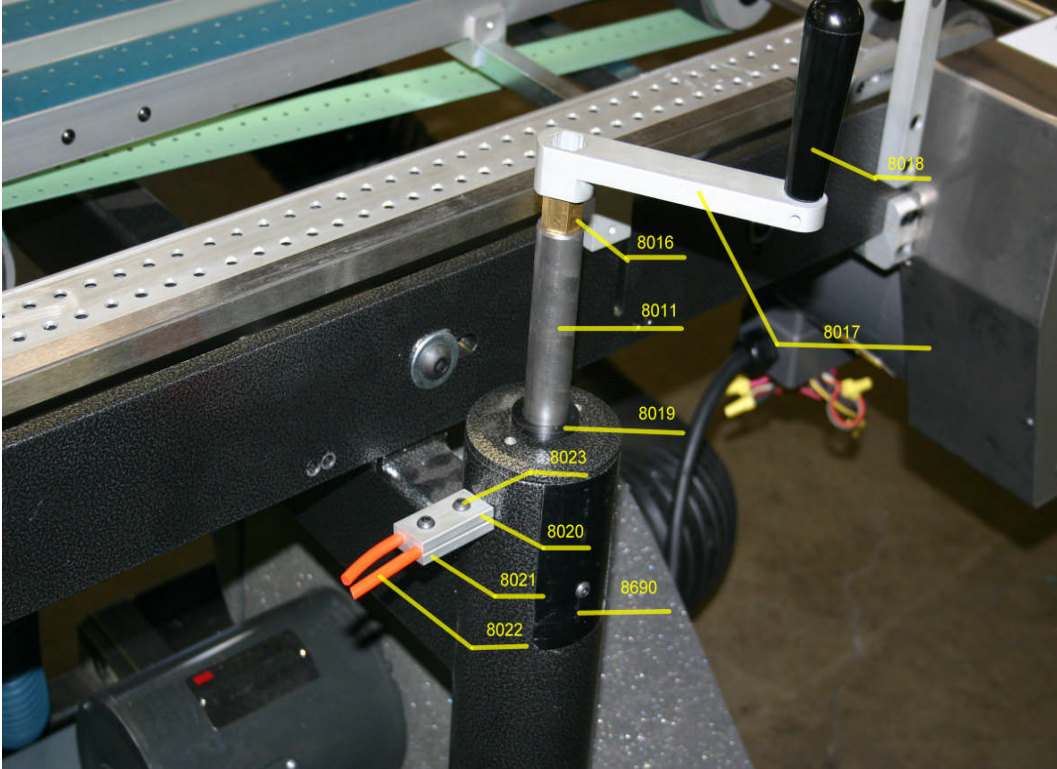



Belt pulley drive

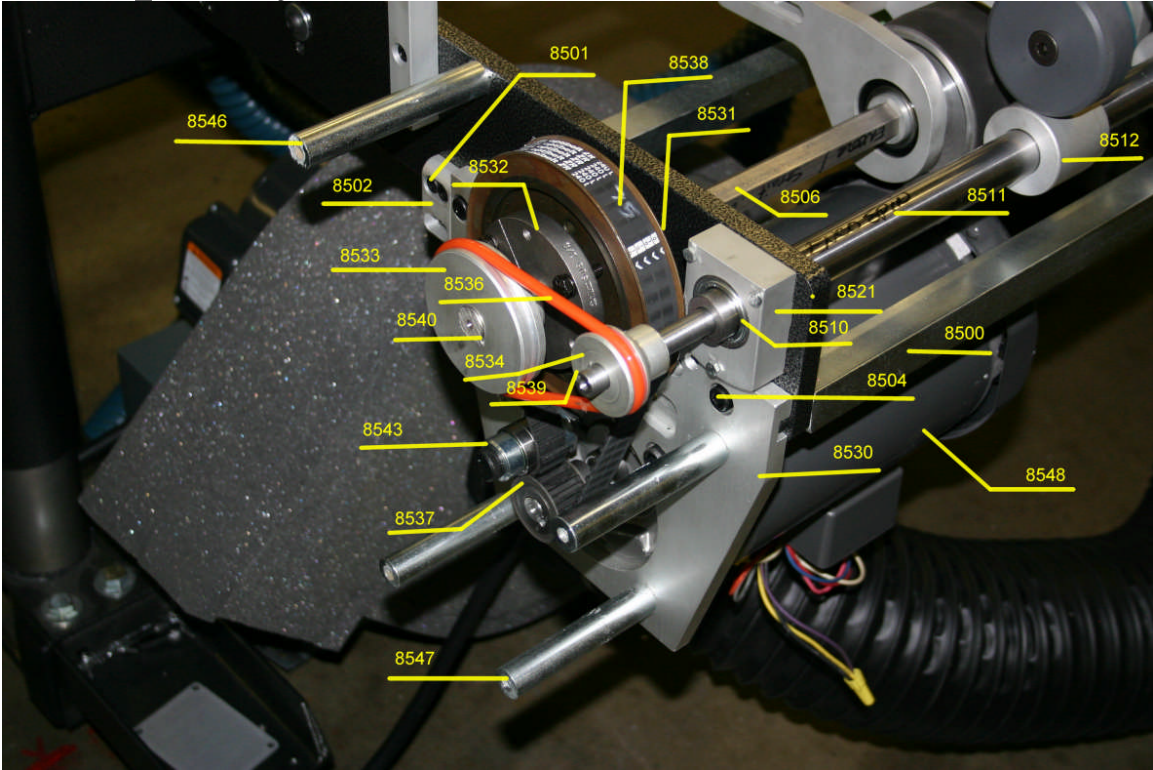


Outer drive cover

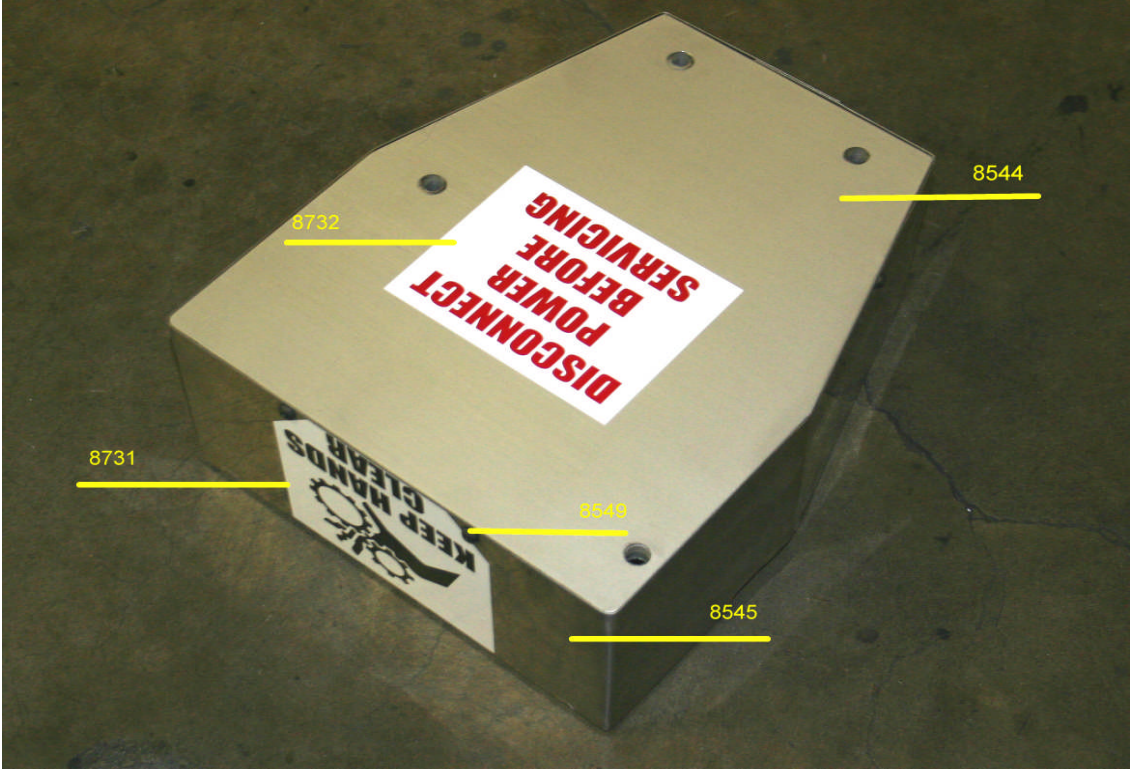



Vacuum rails and belts

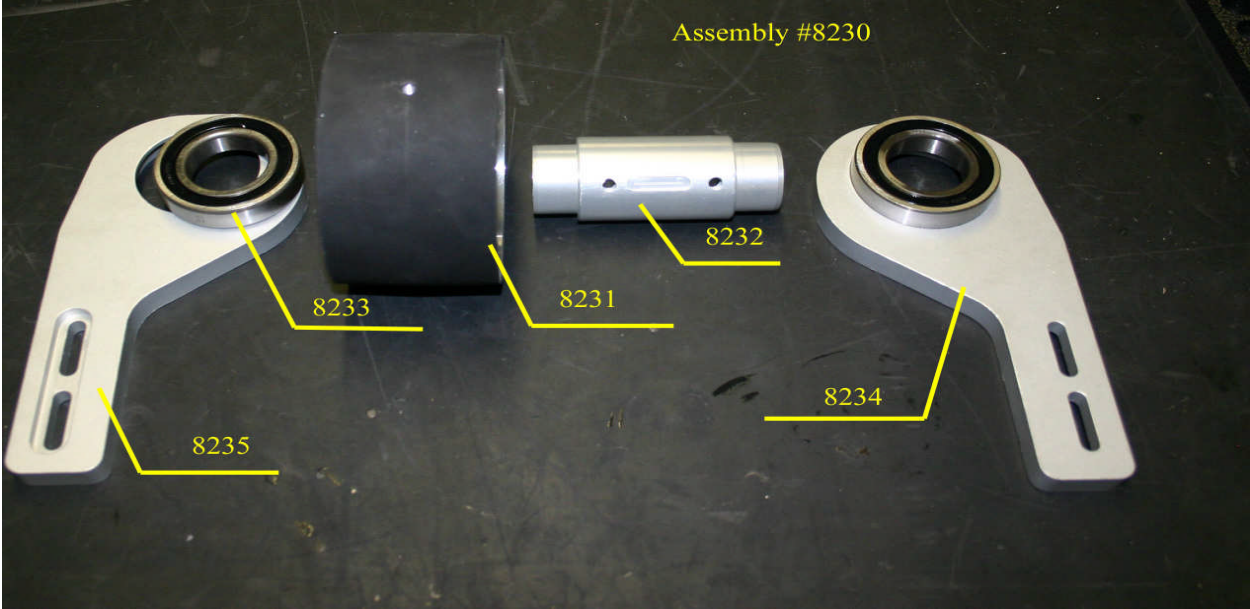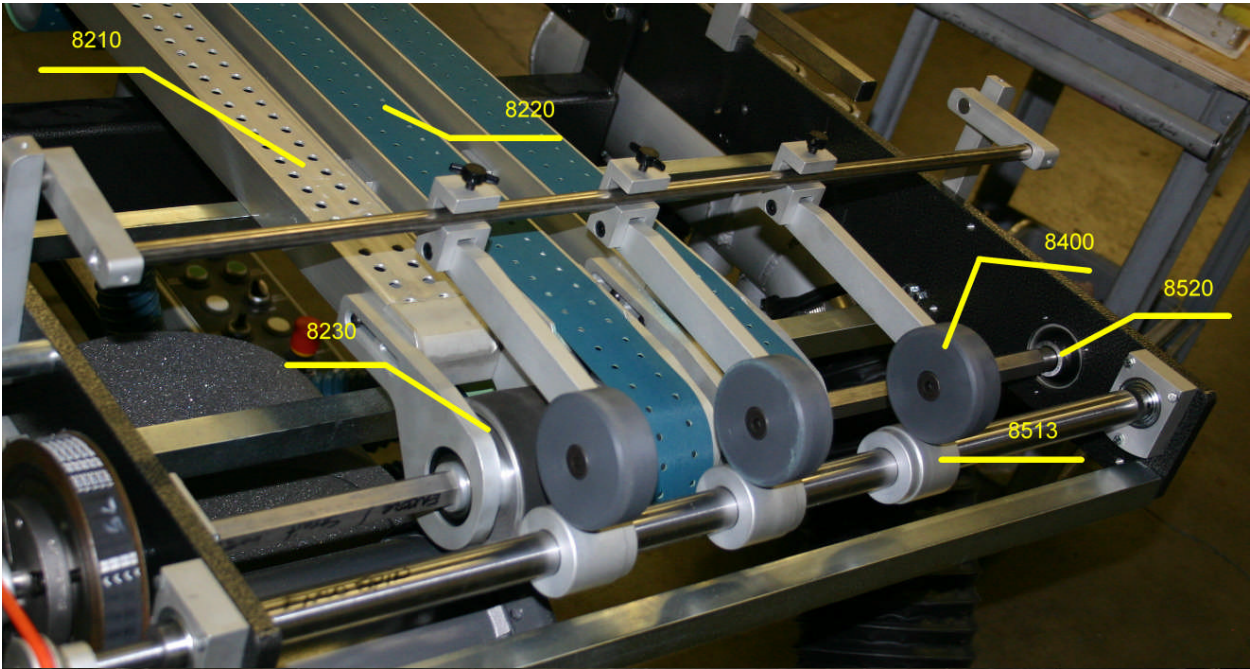

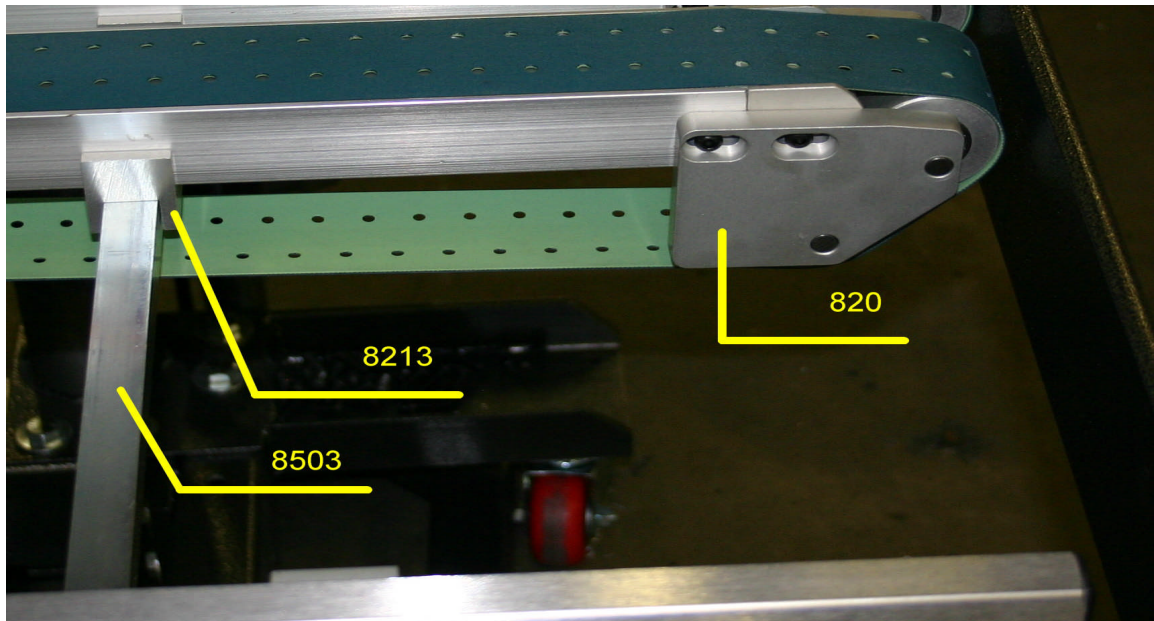



Assembly #8100

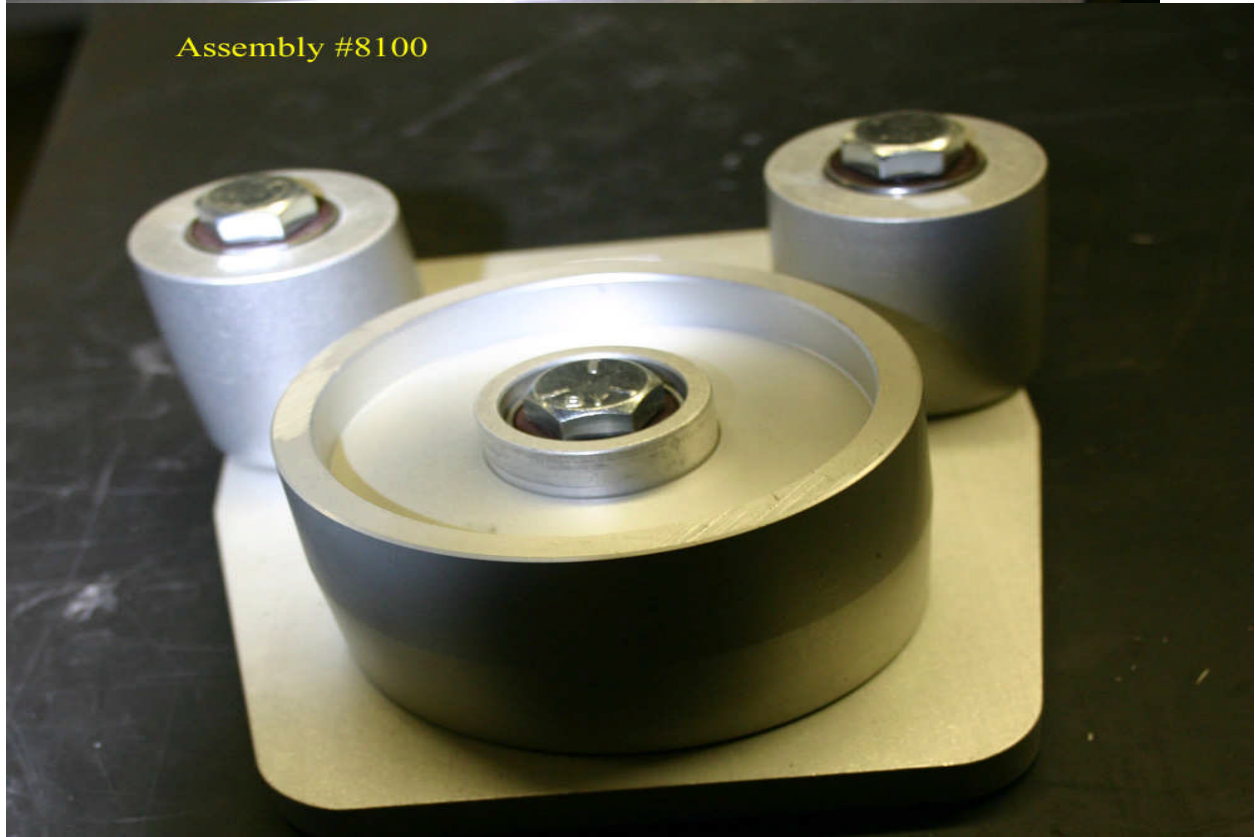

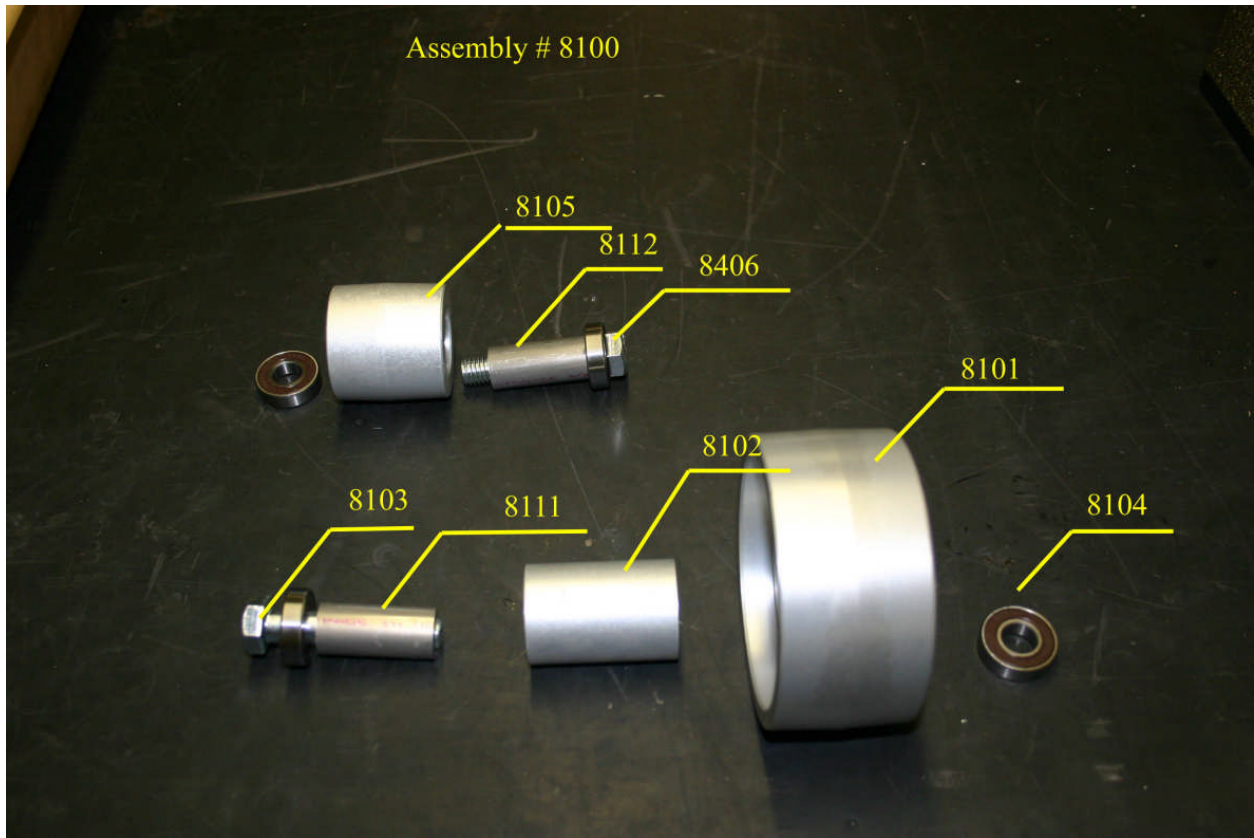

Vacuum components

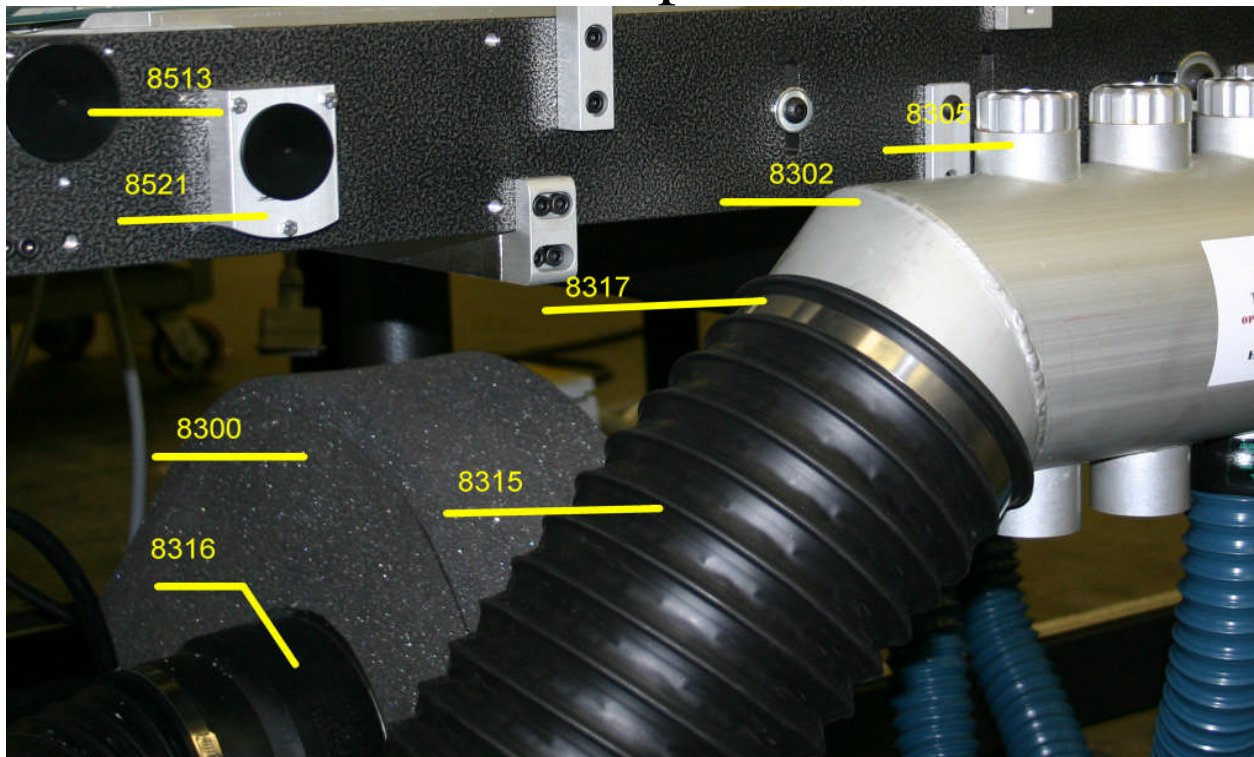

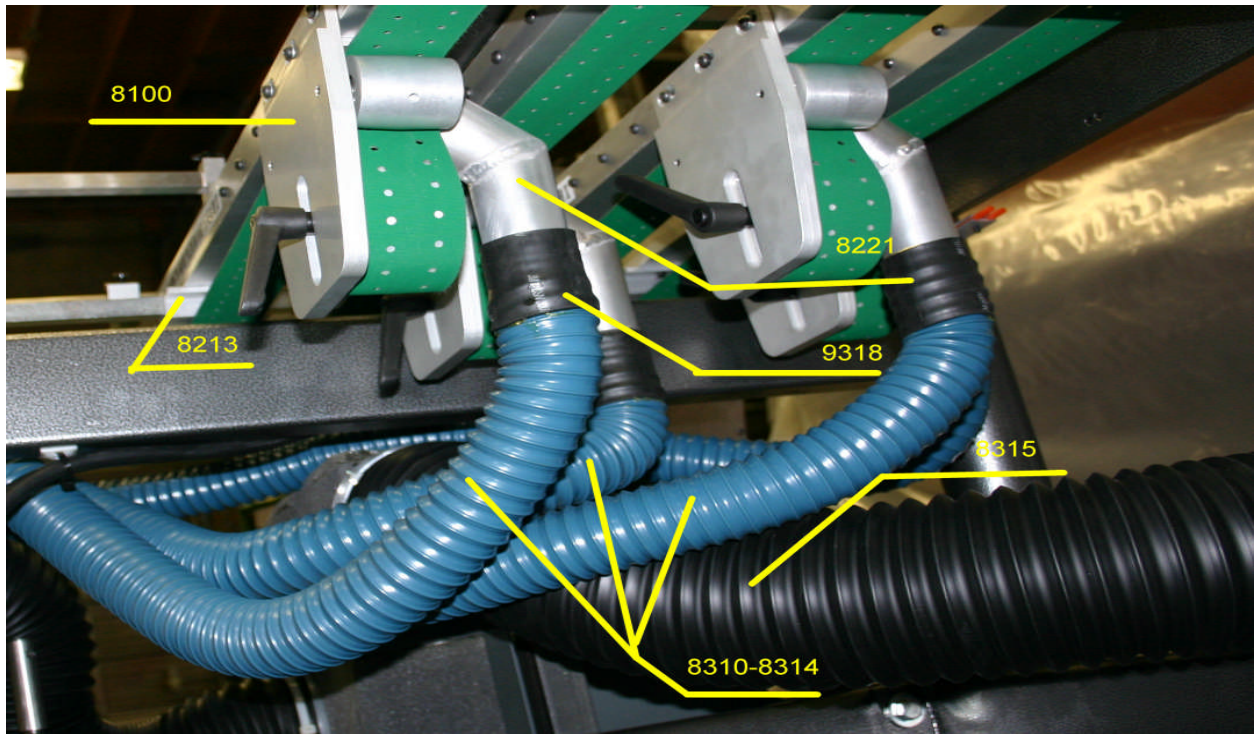

Standard Encore accessories

